


Oxygen Sensor after Catalytic Converter, Bank 2

Removing

- Disconnect electrical connector -3- of oxygen sensor 2, bank 2.
- 2 - 4-pin connection for oxygen sensor 1 and heater, bank 1.
- 3 - 4-pin connection for oxygen sensor 2 and heater, bank 2.
- Open all cable ties on transmission for oxygen sensor 2 electrical wiring connection.

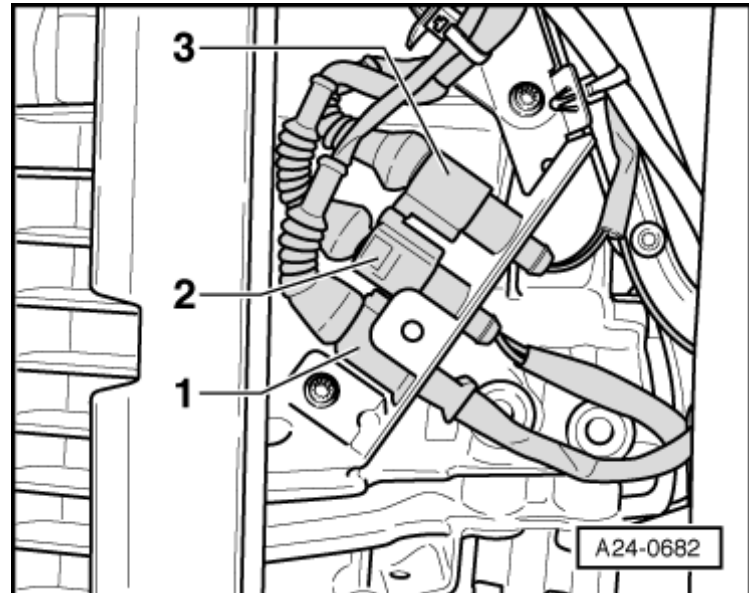


- Remove oxygen sensor -arrow- using tool from Ring Spanner 7 piece set -3337-.

Installing


Installation of oxygen sensor is in reverse order of removal. Note the following.



Note

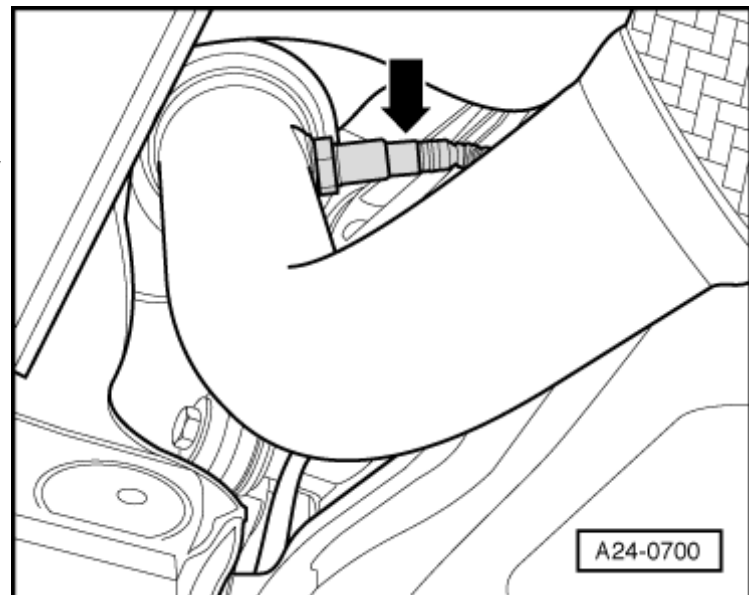

- ◆ *Wires of oxygen sensors must always be secured in the same position when installing so that contact with the exhaust pipe is avoided.*
- ◆ *New oxygen sensors are coated with assembly paste; the paste must not get into slots of oxygen sensor body.*
- ◆ *For a used oxygen sensor, only coat threads with hot bolt paste. This paste must not come into contact with sensor slots. Hot bolt paste → [Parts Catalog](#)*

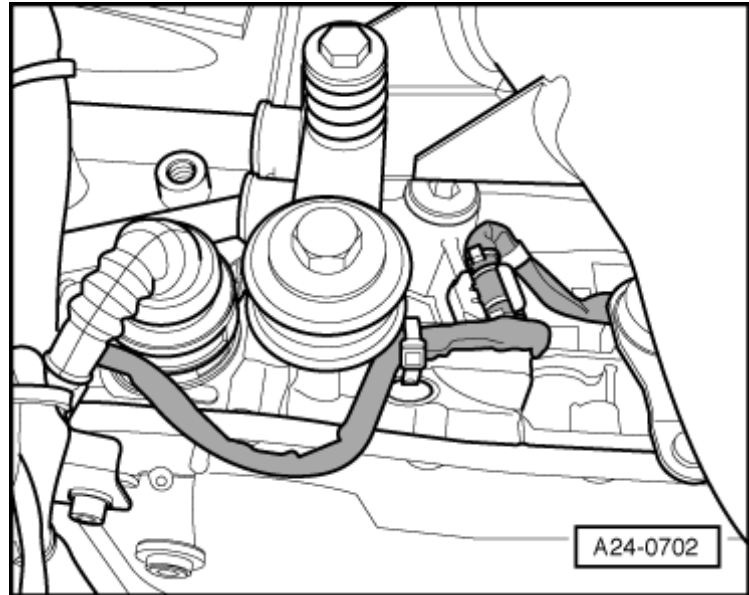Tightening Specifications

Component	Nm
Oxygen sensor	55